Upgrade the F/W for WSG-1000

Step 1

Power off the WSG-1000 and remove the battery.

Step 2

Push and hold the left button with providing the power to WSG-1000 by USB cable simultaneously.



Step 3

The Firmware update information should be shown on display



Step 4


Open the update program of WSG1000_BootLoad.exe.

Step 5

Select the correct COM PORT.


Step 6

Choose the update file (EX: g-trender V1.0.0.2.bin) and press the “update” button.

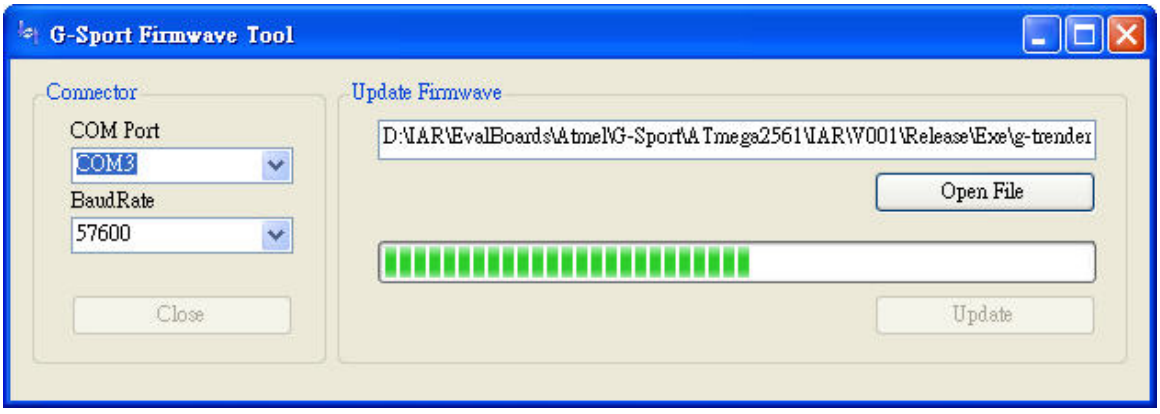

Step 7

Now, Firmware upgrade is started. You can see the “loaing….” shown on the display of WSG-1000, also the following dialogue on computer.

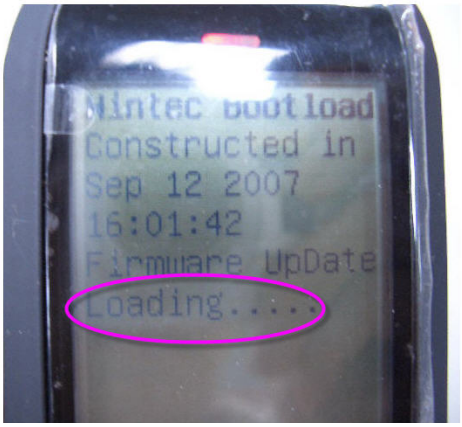

Step 8

When the firmware upgrade is finished, the “**Finish! ^_^**” would be shown on the display of WSG-1000.



After you see the following main screen, you could start to enjoy your trip with WSG-1000.



WSG-1000 韌體更新流程

步驟 1. 關閉 **WSG-1000** 電源及卸除電池

步驟 2. 將 **WSG-1000** 的左鍵按住不放，此時再將 **USB** 線插入 **G-Trender**
此時應出現如下畫面，表示 **G-Trender** 已進入可更新程式狀態



步驟 3.開啓 **WSG1000_BootLoad.exe** 更新程式，然後選擇正確 **COM PORT**，再選擇欲更新的檔案(例：**g-trender V1.0.0.2.bin)**，按下 **update** 即可(如無法直接開啓請下載安裝 **dotnetfx.exe)**

